


# TANE ALARM PRODUCTS



## Installation Instructions for MET-44 Surface Mount Armored Overhead Door Switch GAP 2”

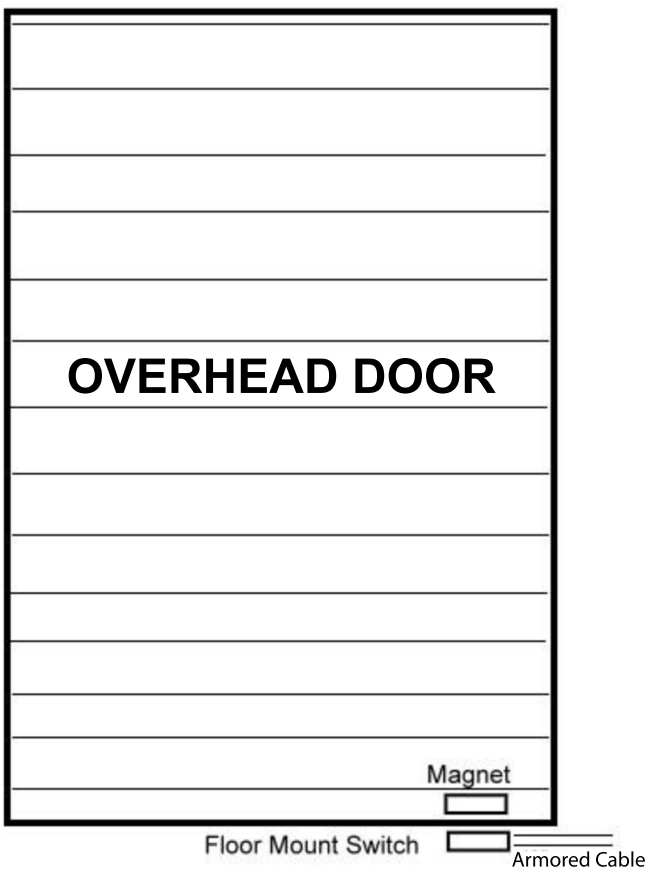

Floor mount the switch in a “forklift safe” location directly beneath the overhead door  
Mount the magnet directly onto the overhead door bottom with the provided mounting bracket directly above and parallel to the switch  
Make sure the gap between contact and magnet is NOT less than 1/2” apart  
Splice the 18” or 36” armored cable into alarm circuit

**WWW.TANEALARM.COM**

906 Jericho Turnpike  
New Hyde Park, NY 11040

Tel: 516-328-3351 800-852-5050  
Fax: 516-326-9125 Email: [info@tanealarm.com](mailto:info@tanealarm.com)